

Oasis Caliber™ IV Digital Hygrometer/Thermometer User Manual

Thank you for purchasing the Oasis Caliber™ IV digital hygrometer and thermometer. We are certain that you will find this is the most dependable and accurate unit available in the consumer market. To maintain your hygrometer in optimal working order, we recommend that you review this manual thoroughly to understand how to use the advanced features of the Oasis Caliber™ IV.



1. Humidity Reading
2. Temperature Reading
3. Set
4. Max/Min/Clear
5. Fahrenheit/Celsius
6. Battery Tray
7. Magnetic Mount



Getting Started

1. Slide the battery tray out to insert the battery plus side up. This will activate the display and begin the collection of readings.
2. Mount the unit onto the desired location. The best location is in a central area where the airflow to the unit will not be blocked. To attach magnet mount, first ensure that the surface is clean of any dust or other debris. For best results, use alcohol to clean the area where the adhesive will be applied. Remove the backing paper from the adhesive disc on the back of the magnet and apply pressure to hold the magnet in place for 30 seconds.

Switching Between Celsius & Fahrenheit

To switch the display between Fahrenheit and Celsius temperature readings, move the Fahrenheit/Celsius Switch back and forth.

MAX/MIN Recording & Display

The Oasis Caliber™ IV will record the minimum and maximum values for both humidity and temperature. To view the maximum values, press the MAX/MIN/Clear button one time. The maximum value will be displayed with the word MAX at the top of the temperature reading.

To view the minimum values, press the MAX/MIN/Clear button two times. The minimum value will be displayed with the word MIN at the top of the temperature reading.

To reset the values, while viewing either the MAX or MIN value, press and hold the MAX/MIN/Clear button for about 5 seconds. When the display shows empty values, that MAX or MIN value has been reset. Both values reset independently. Removing or replacing the battery will also reset both the minimum and maximum values.

Calibrating the Humidity Display

Your hygrometer is factory calibrated and should not need any further adjustments. The following instructions should be performed only to correct an error in calibration.

1. Determine the amount of calibration needed by finding the difference between the display value and the expected value. For example, if you are expecting 70% but your unit displays 71%, the difference in calibration is $71 - 70 = 1$. If you need the display lower as in this example, change the calibration by -1%. If you need the display higher, add (+) the value.
2. Press and hold the Set button for 3 seconds to place the unit into calibration mode.
3. In calibration mode, you will see the current adjustment setting flashing on the display. If this is the first time you are calibrating your unit, it will show 0%. If you have already calibrated the unit previously, you will see the current adjustment.

4. Press the Min/Max/Clear button to adjust the display based on your calibration. Pressing the button once will change the adjustment by 1%. The Oasis Caliber™ IV adjustment range is +/-6% in the sequence: 0, +1, +2, +3, +4, +5, +6, -6, -5, -4, -3, -2, -1, 0.

5. When you have completed your adjustment, press the Set button one more time and it will take the unit out of calibration mode. If you leave the unit in calibration mode for more than one minute without pressing any buttons, the unit will automatically will change back to operations mode.

Restoring Factory Calibration

To restore your Oasis Caliber IV back to factory calibration, simply follow the calibration instructions above and adjust the display back to 0%. This will restore the unit back to factory calibration.

Limited Warranty

The Oasis Caliber™ IV is covered by a limited warranty against defects from materials or workmanship for a full 1 Year with proof

of purchase. Any misuse or excessive wear and tear is not covered under the limited warranty.

Error Codes

When the humidity or temperature are too low or high for an accurate reading the following codes will display:

LL% - below 32° F

HH% - above 122° F

Contact Information

If you have any questions or warranty inquiries please call us directly at 516-520-5258 or email customersupport@cigaroasis.com.



79 Heisser Court
Farmingdale, NY 11735
www.cigaroasis.com

V11.20